

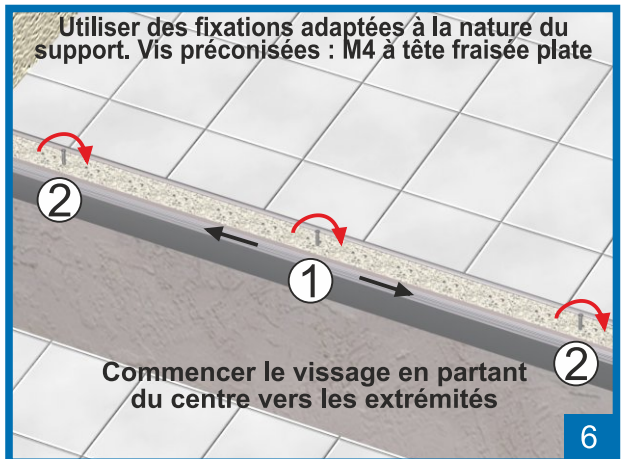
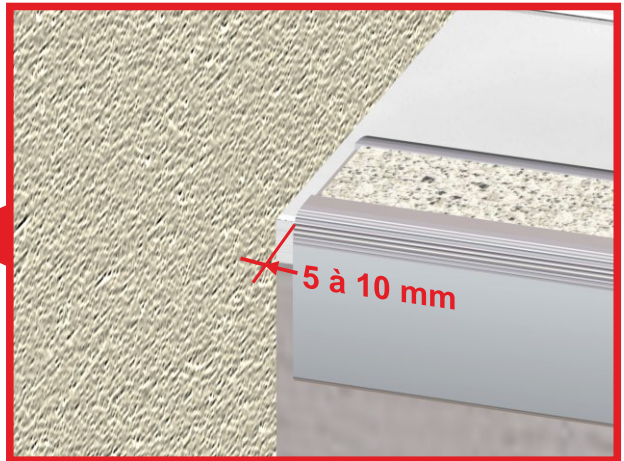
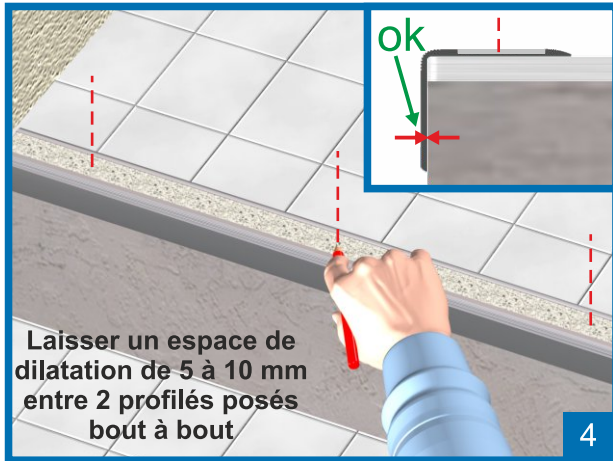
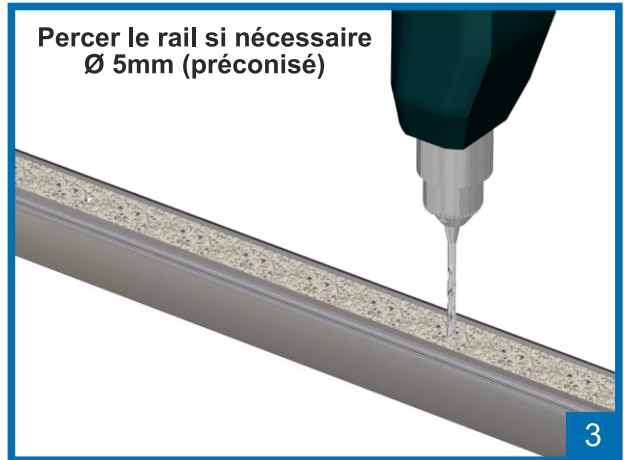


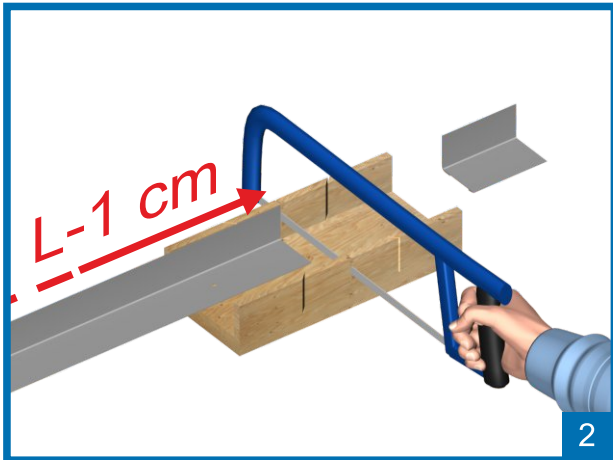

réf. 810 401  
810 402  
810 403  
810 404  
810 405  
810 406  
810 409  
810 410  
810 411

EPI

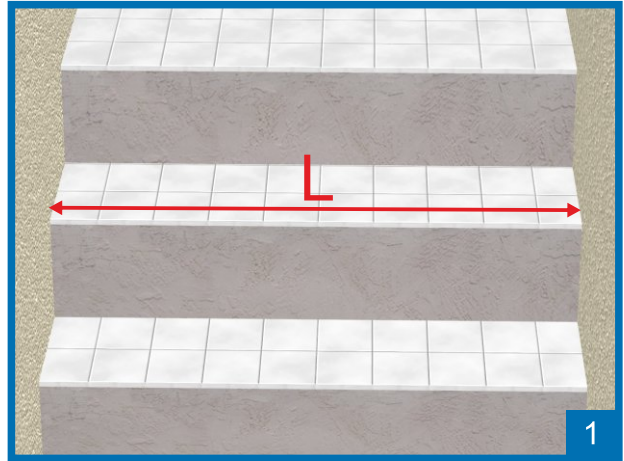

En cas de pose sur bois, il est nécessaire d'avoir un perçage au moins tous les 20 cm