
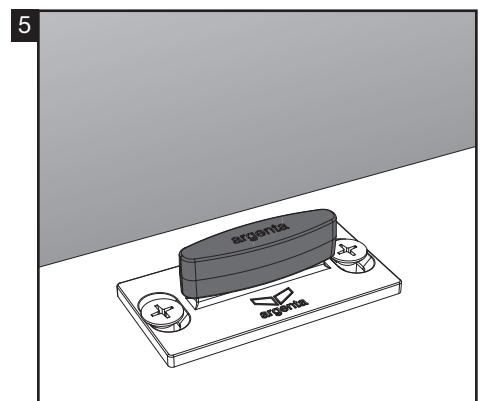
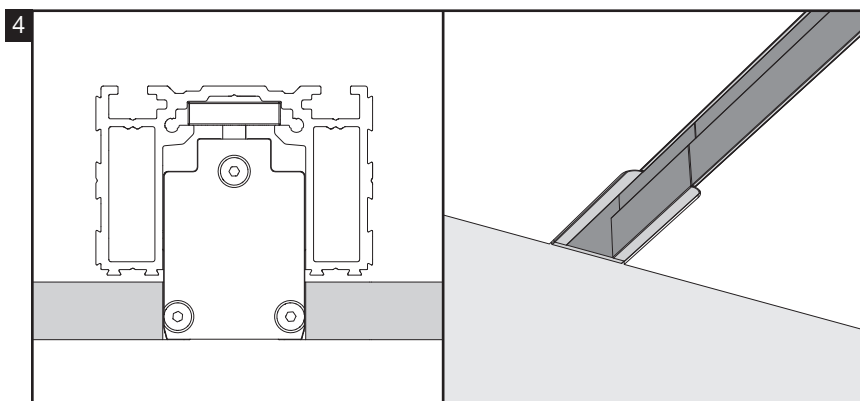
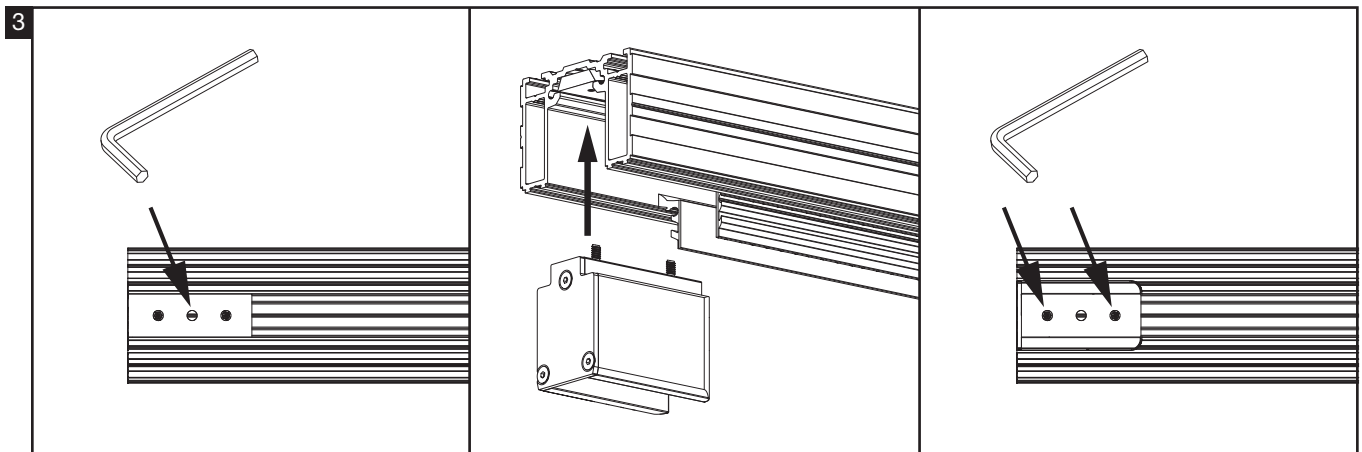
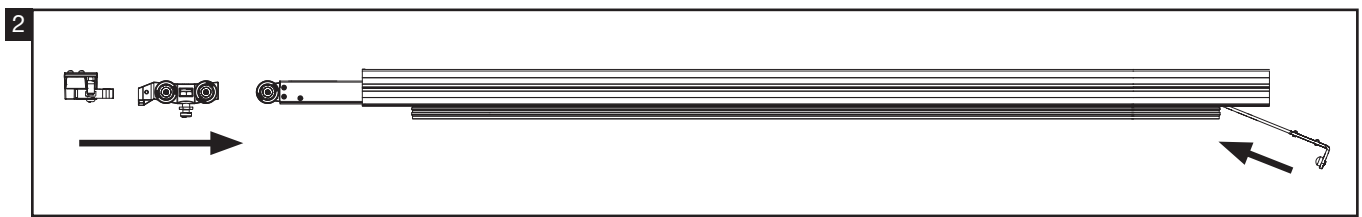



LEES DEZE HANDLEIDING EERST AANDACHTIG EER U VAN START GAAT. HET PLAATSEN VAN DE ARGENTA[®] PROSLIDE INVISIBLE PROFILE DIEN TE GEBEUREN DOOR EEN VAKMAN. LISEZ CE MODE D'EMPLOI ATTENTIVEMENT AVANT DE COMMENCER. LE MONTAGE DE L'ARGENTA[®] PROSLIDE INVISIBLE PROFILE DOIT ÊTRE EFFECTUÉ PAR UN PROFESSIONNEL. LIEBEN SIE DIESE ANLEITUNG AUFMERKSAM DURCH, BEVOR SIE MIT DER MONTAGE VON ARGENTA[®] PROSLIDE INVISIBLE PROFILE ANFANGEN. PLEASE READ THIS MANUAL CAREFULLY BEFORE STARTING. THE ARGENTA[®] PROSLIDE INVISIBLE PROFILE SHOULD ONLY BE INSTALLED BY A PROFESSIONAL.

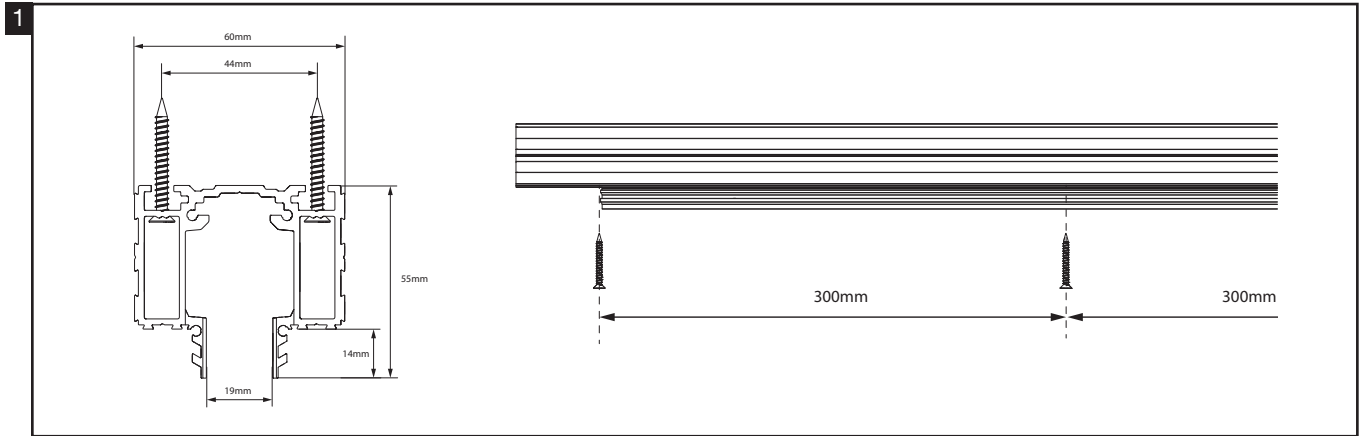

LEES DEZE HANDLEIDING EERST AANDACHTIG EER U VAN START GAAT. HET PLAATSEN VAN DE ARGENTA® PROSLIDE INVISIBLE PROFILE DIENT TE GEBEUREN DOOR EEN VAKMAN. LISEZ CE MODE D'EMPLOI ATTENTIVEMENT AVANT DE COMMENCER. LE MONTAGE DE L'ARGENTA® PROSLIDE INVISIBLE PROFILE DOIT ÊTRE EFFECTUÉ PAR UN PROFESSIONNEL. LIEBEN SIE DIESE ANLEITUNG AUFMERKSAM DURCH, BEVOR SIE MIT DER MONTAGE VON ARGENTA® PROSLIDE INVISIBLE PROFILE ANFANGEN. PLEASE READ THIS MANUAL CAREFULLY BEFORE STARTING. THE ARGENTA® PROSLIDE INVISIBLE PROFILE SHOULD ONLY BE INSTALLED BY A PROFESSIONAL.


6

2 standard stops

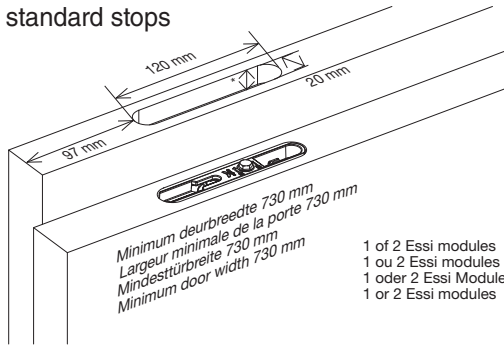


* Manual-Fix: 12mm / Auto-Fix: 15mm

2 slowstops

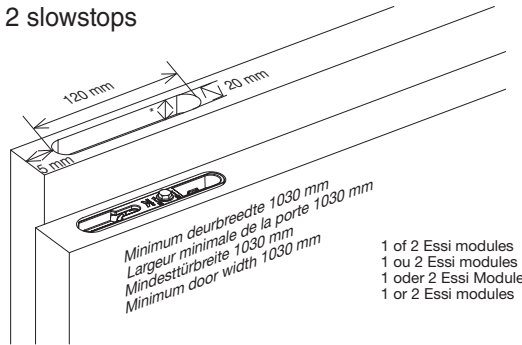

* Manual-Fix: 12mm / Auto-Fix: 15mm

1 standard stop & 1 slowstop

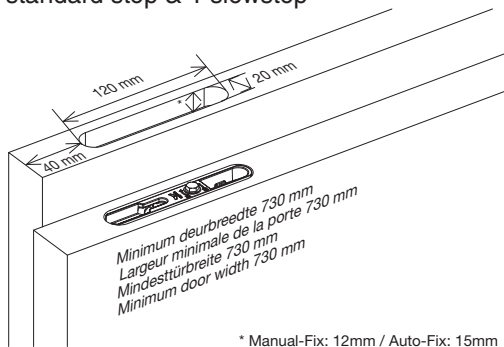


* Manual-Fix: 12mm / Auto-Fix: 15mm


1 of 2 Essi modules
 De Slowstop moet aan de kant van de Essi module geplaatst worden.
 1 ou 2 Essi modules
 Veuillez placer l'amortisseur slow stop à la coté du module ESSi.

1 oder 2 Essi Module
 Der Slowstop soll an der Seite des Essi Modules montiert werden.
 1 or 2 Essi modules
 Mount the slowstop at the same side as the ESSi module.


7

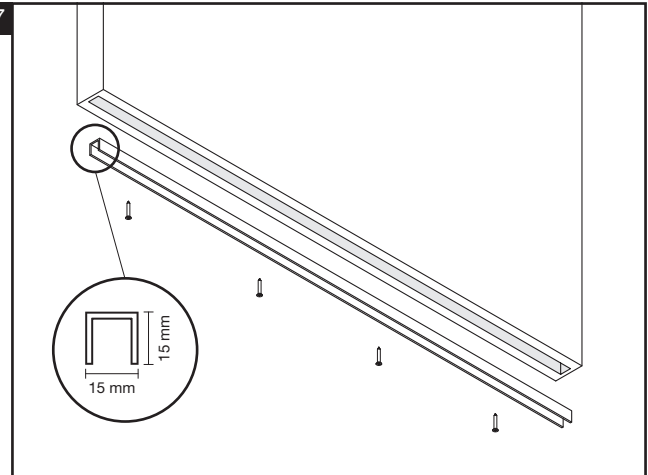

8

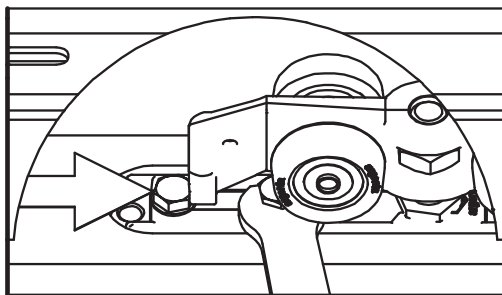

SW 8

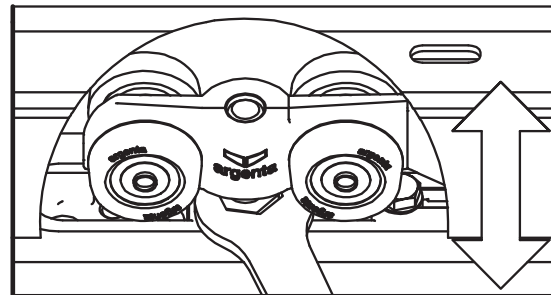

SW 13